

JD 30, 40, 50, 55, 60-SERIES COWL (DASH) INSTALLATION INSTRUCTIONS

1. Remove old cowl:
 - a. Remove bolts right and left at the bottom.
 - b. Remove bolts below the steering wheel (2); discard old cowl.
2. Lay new cowl in place where the old one was. *Start* the bottom bolts, right and left sides. Line up the hole in the new cowl under the steering wheel *before* you start these bolts. Tighten up the bolts on the bottom, right and left. Before tightening the bolts below the steering wheel, push the new cowl (right or left side, one at a time) in tightly against the tractor then tighten one side at a time.

Notes:

- If you are installing a black cowl on a 30- or 40-series, use the same instructions, just discard the old metal cowl panels (both pieces). Follow step 2 to install new cowl.
- The 55-series cowl doesn't have the fuse access door on it because the engine heat warped it on the original one. To change fuses, simply remove the entire cowl, replace fuse, then reinstall cowl.